

PLATINI



USE & CARE MANUAL



CUSTOMER CARE
1800 102 5963 / 022-41280000

VITAMIN JUICER
VJ01

► TROUBLE SHOOTING :

Problem	Possible	Reasons
8. Colour stain on the bowl, strainer, spinning brush.	Natural dye from food	The slow juicer is BPA-free and chemical-free on all attachments, therefore natural dye from food when juicing is perfectly normal. To reduce staining, rinse and clean immediately after each use. Diluted vinegar or bleach can also be used.
9. Mold in silicone part of spinning brush.	Poor cleaning	Be sure to clean thoroughly by detaching the silicone brushes from the spinning brush. Don't forget to plug it back in before juicing
10. Strainer damage	Ice, frozen foods, large hard seeds or pits, unknown substance, or excess food in bowl.	Refer to instruction Manual for proper usage and juicing tips. Remember not to overcrowd food or force foods in
11. Deformation Of attachments	Exposed to head or abrasive materials.	Do not clean any attachments in dishwasher or use hard cleaners. Plastics tend to deform when exposed to high heat.
12. Too much pulp coming out	Excess food in bowl clogging up the strainer or food not cut into small pieces.	Cut food, especially fibrous foods, into smaller pieces to avoid the fibres wrapping around the screw. Also input food at a slow pace allowing all the pulp to eject before adding more food.

► TROUBLE SHOOTING :

Problem	Possible	Reasons
1. Bowl is stuck and does not detach from the base.	Excessive food in the bowl. Unknown substance in the bowl.	Press reverse button 3-5 seconds. Repeat process 2-3 times. Then, push bowl upward while turning.
2. Hopper/lid is stuck.	Excessive food in the bowl. Unknown substance in the bowl.	Press reverse button 3-5 seconds. Repeat process 2-3 times. Then, press down on top of lid while turning.
3. Motor is stuck or has stopped.	Excessive food in the bowl. Safety feature : automatic shutoff due to overheating.	Press reverse button 3-5 seconds. Repeat process 2-3 times. If motor has stopped, let cool down before trying again
4. Leaking from underneath the bowl.	Extraction packing not plugged in correctly	Be sure to plug in extraction packing tightly after cleaning.
5. Squeaking noise when juicing.	Friction between the squeezing screw and bowl or food.	Squeaking sound is perfectly normal. Do not run the juicer without any food.
6. The unit vibrates.	Sign of motor working properly	Vibration is perfectly normal. However, severe shanking which causes imbalance of the unit should be checked for a defective screw.
7. Water mark or scratch on the squeezing screw.	Molding marks during manufacturing process	These marks and lines on the squeezing screw are perfectly normal.

Dear Customer,

Thank you!

For choosing Platini Vitamin Juicer of which you are now the proud owner.

Please read and follow all the instructions given in this use and care manual carefully, prior to using your Platini Vitamin Juicer, to get the best mileage and trouble free operation.

Happy Juicing!

BAJAJ ELECTRICALS LIMITED

► TECHNICAL SPECIFICATIONS :

Model	Platini Vitamin Juicer VJ01
Wattage	150W (DC Motor)
Voltage	220-240V ~ 50/60Hz
Capacity	0.4 Litre

► ACCESSORIES :

1. Cleaning Brush
2. Container - 2 nos.

► PARTS DESCRIPTION

- | | |
|--------------------|---------------------------------|
| 1. Hopper | 7. Juice outlet |
| 2. Squeezing screw | 8. Base w/o handle |
| 3. Strainer | 9. Cleaning brush |
| 4. Spinning brush | 10. Pusher |
| 5. Bowl | 11. Container |
| 6. Pulp outlet | 12. Frozen Fruit Pulp container |

► KNOW YOUR PLATINI VITAMIN JUICER



1



2



3

FOR THE FROZEN FRUIT PULP:

1. Put the frozen dish attachment downwards into the bowl by making the symbol "▼" on the frozen dish attachment align with the symbol "▲" on the motor unit, make sure that it shall be assembled well into the bowl.
2. Put the grinding head into the frozen dish attachment and ensure the grinding head is covered well into the axis of the motor unit.
3. Assemble the hopper on the jar correctly. Firstly make the symbol "▼" on the hopper align with the symbol "▲" on the motor unit and then rotate the hopper clockwise until the symbol "I" on the hopper aligns with the symbol "▲" on the motor unit. Make sure the hopper is assembled in position properly otherwise the appliance will not operate.
4. Place the juice container below the juicer outlet (no need to use the residue container).


► HOW TO DISASSEMBLE AND CLEAN



PARTS REQUIRED FOR CLEANING




4

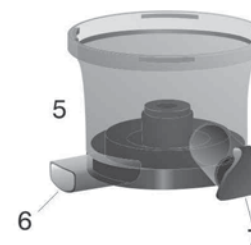

5

6

7

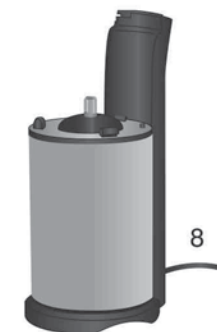

8

► ASSEMBLY INSTRUCTIONS

- I. Place the strainer into the spinning brush.
- II. Place the strainer + spinning brush into the bowl. While inserting strainer + spinning brush into the bowl the hole for the pulp outlet in the juicing bowl should be matched. Be sure to align the white dot on top of the bowl. When two dots are properly aligned, strainer should lock into the bowl preventing it from moving around.
- III. Place squeezing screw inside the strainer and rotate until falls into place.
Assemble the hopper on to the bowl. Be sure to align the arrow on the Hopper to the white dot on top of the strainer and bowl, and twist to close so that the arrow is pointing to the "□" position.
- IV. Assemble the entire Top set on to the base.
(with assembly of parts as mentioned in the point I, II, III)
- V. As shown, once the Top set is put on the base, twist the whole Top set so that the hopper edge is pointing to the "close" sign on the base.
- VI. Plug in the unit.
- VII. Place containers under both the juice & pulp ejectors. Underneath the bowl, there is a rubber pad called the Extraction Packing which allows all of the juice to only discharge from the juice outlet. Before juicing, please make sure the Extraction Packing is plugged in completely to prevent any leakage.
- VIII. Put frozen fruits such as banana into the feeder tube. The frozen fruit ice cream will come from the juice outlet.



9



10



11



12

▶ IMPORTANT SAFEGUARDS

When using the electrical appliance, the below basic safety precautions should be followed:

1. Read all instructions.
2. Before using check that the voltage power corresponds to the one shown on the appliance nameplate.
3. Do not operate any appliance with a damage cord or plug or after the appliance malfunction or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
4. The use of attachment, including sieve, top lid, food pusher, jar not recommended or not sold by manufacturer. It may cause fire, electric shock or injury.
5. Do not place on or near a hot gas or electric burner or in a heated oven.
6. Do not let cord hang over edge of table or counter.
7. Never run the appliance under no food condition.
8. Do not use the appliance if the rotating sieve is damaged.
9. Do not put your fingers or other objects into the juicer opening while it is in operation. If food becomes lodged in opening, use food pusher or another piece of fruit or vegetable to push it down. When this method is not possible, turn the motor off and disassemble juicer to remove the remaining food.
10. Do not push the food with hand, spoon, chopstick and clip etc. other than food pusher into the hopper when the appliance is connected to power source.
11. Always make sure that the juicer cover is clamped securely in place before motor is turned on. Do not unfasten clamps while juicer is in operation.
12. Sharp Blade-Always use food pusher.
13. Avoid contacting moving parts.
14. For the juicer, make sure the switch is on "OFF" position after each use of your juicer. Make sure the motor stops completely before disassembling.
15. Do not immerse the Motor Unit into water or other liquids.
16. All detachable parts must be dry completely after cleaning, and then assemble them into appliance for next using.

▶ ASSEMBLY INSTRUCTIONS



► CLEANING AND MAINTENANCE

1. Unplug the appliance and wait for it to completely cool down before cleaning.
2. In order to detach & clean more easily, run the juicer without load for about 30 seconds after removing the pulp. If the hopper cannot be detached easily, please follow and repeat the following operation for two or three times: Reverse—OFF—ON, at the same time, hold and rotate the hopper to detach it. After finishing extracting juice, pour some water into the hopper to clean it so that it will be easier to be detach.
3. Unlock the hopper by turning it in anti-clockwise and then remove it.
4. Detach the grinding head, strainer and rotary cleaning brush in sequence.
5. By pulling upward, remove the jar.
6. Empty the pulp container, and then clean the hopper, grinding head, strainer, rotary cleaning brush, jar and pulp container under running water. The small cleaning brush can be used for the strainer for better cleaning.
Caution:
 1. **Strainer is sharp, so handle carefully during cleaning**
 2. **Do not use metal sponge to clean, it will damage the machine.**
 3. **Wash all parts with a cleaning brush thoroughly to avoid contamination.**
7. If you need to clean the pulp outlet thoroughly, you shall firstly pull the lid out of the pulp outlet and then clean it completely with the small cleaning brush.
8. Wipe the outside of motor unit with damp cloth. Never immerse the motor unit in water.
9. Dry all parts and assemble all parts well and then store the appliance in a dry place. The juice container can be stored in the pulp container. If you need to clean the pulp outlet thoroughly, you shall firstly pull the lid out of the pulp outlet and then clean it completely with the small cleaning brush.
8. Wipe the outside of motor unit with damp cloth. Never immerse the motor unit in water.
9. Dry all parts and assemble all parts well and then store the appliance in a dry place. The juice container can be stored in the pulp container.

17. Close supervision is necessary when any appliance is used by or near children.
18. Warn of potential injury from misuse.
19. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
20. Always disconnect the juicer from the supply if it is left unattended and before assembling, disassembling or cleaning.
21. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
22. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
23. Children shall not play with the appliance.
24. Do not use outdoors.
25. Save these instructions.

HOUSEHOLD USE ONLY

FOR MAKING FROZEN DISH

1. Prohibited ingredients (Ingredients that may cause part damages)
 - a) Ice and deeply frozen ingredients. b) Coffee beans, dry beans, grains etc. c) Pumpkin, sweet potato etc. (Frozen when raw or after being boiled). d) Bread, rice, noodles and pasta. e) Liquor, salad oil, other cooking oils.
2. Ingredient preparation
 - a) Peel skin and remove large and/or hard seeds and stones etc. From ingredients such as apples, pineapples, oranges and avocado. For citrus fruit, peel thin skin to have better texture. For tomatoes, boil them and peel skin. b) Cut the ingredients into pieces less than 3cm cubes. c) Freeze ingredients. When freezing ingredients, spread them flat on an aluminum tray to avoid touching each pieces. d) Thaw frozen ingredients at room temperature until a fork can penetrate to center. (approx. 5-30 minutes) If frozen ingredients are used immediately after taking out from a freezer, it may cause malfunction on the appliance.
Drop the prepared ingredients into the hopper and gently push them down into the grinding head using the food pusher.
 3. When thawing is insufficient, ingredients are not mixed or they do not become a smooth texture.
 4. Do not use re-frozen ingredients or ingredients which are stored in a freezer for long time.
 5. Frozen ingredients should be use within one month.

NOTE:

- 1) Feed ingredients little by little every approximately 5 seconds. Do not feed the feeding tube with too much ingredients forcibly.
- 2) When using more than one kind of ingredients, feed them little by little alternately.
- 3) Do not force to push ingredients into the feeding tube.
- 4) In case of jamming of ingredients or idle running, press and hold the power switch to "REV" position for 3-4 secs.

► FOR THE INITIAL USE

1. Unpack the appliance and place all parts on a horizontal surface.
2. Immerse all the detachable parts and accessories in warm soapy water and rinse them and dry. But never immerse motor unit in water for cleaning to prevent the risk of electric shock.

NOTE: The strainer can be cleaned completely by the small cleaning brush.

3. Before assembling, be sure the power cord is unplugged from the power outlet and the power switch is on the "OFF" position.
4. Prepare all the required materials according to the characteristics of them
 - Materials with hard fibre
The materials with hard fibre shall be cut into slices 3~5cm in length and 1.5~2cm in thickness.
 - Leaf vegetables and materials with long & hard fibre (such as celery, wild celery herb etc.) Cut the stems of the materials into slices 3~5cm in length.
 - The fruit with hard core shall be pitted. The cores of peach, plum, mango, apricot and jujube shall not put into the hopper to avoid any malfunction.
 - The materials with thick or hard peel shall be peeled before being put into the juicer for processing.
 - The frozen materials can just be used after being defrosted. Never use ice.
 - Never process the materials with high vegetable oil or animal oil with this juicer to avoid the degradation and damage of the grinding head
5. Never put sugarcane, coconut or cereal without being soaked with water (e.g. bean, rice) into this juicer for processing.
6. Do not overstuff the juicer each time, therefore, the materials with less moisture and hard fibre shall be put into the hopper after being cut into slices.
7. Assemble the buffer plate well in position
 - The buffer plate shall be assembled well in the residue outlet after finish cleaning each time.

► HOW TO USE

1. Before attaching the power cord into the outlet, make sure the power switch is in the "OFF" position. The power switch has three settings: "ON", Press the power switch to "ON" position to activate the motor and start making juice; "OFF" position, Press the power switch to "OFF" position to turn off the machine; "REV" means reverse rotation, which is only used when something is stuck and you need to unclog.
2. Make sure the juice container and the pulp container are placed in position.
3. Drop the prepared fruits or vegetables into the hopper and gently push the fruit down into the grinding head using the food pusher.
4. Press the power switch to the "ON" position and the appliance starts to work. After few minutes, the juice flows out.
Caution: Do not pre-operate before putting materials or do not operate with an empty jar.
Caution: Do not put your fingers or other foreign objects into the hopper while it is in operation.
5. During operation, if the machine is stuck and not operable, please firstly press the power switch to "OFF" position and then tilt the motor unit and press the reset switch on the rear side of the motor unit (below the ON/OFF switch). After it, Press and hold the power switch to the "REV" position for few seconds then try operating again. When the reverse function does not work, turn off the machine and reassemble following the instructions given. After reassembly please try turning on the machine.
6. When the juice container is full (the max capacity is 400ml) or the food has been finished extracting, turn the power switch to the "OFF" position and empty the juice container and pulp container before continuing the process.

Note:

1. **The max operation time shall not exceed 15 minutes. Minimum 30 minutes rest time must be maintained between two continuous cycles.**
2. **Do not insert too much food to extract per time.**
3. **During operation, if the interlock switch between the hopper and the motor unit is disconnected, the motor will stop to prevent any damage.**
4. **For best results, please consume the juice within 2-3 hours of making (since it does not have any preservative).**